


# 45cm Compact Freestanding Dishwasher

## ODWF4510X

**omega**

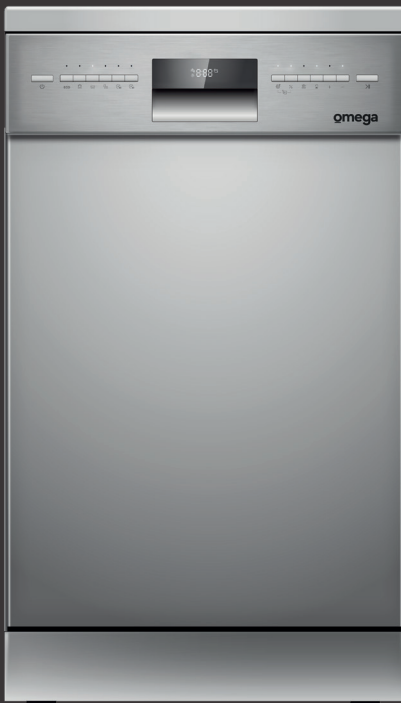


**Designed to Enhance**  
EST. 1981

# Introducing your new 45cm Compact Freestanding Dishwasher

## Adjusting the Upper Basket Height

The height of the upper basket can be easily adjusted to accommodate taller dishes in either the upper or lower basket by following the steps on page 16 of your User Manual

## Dimensions

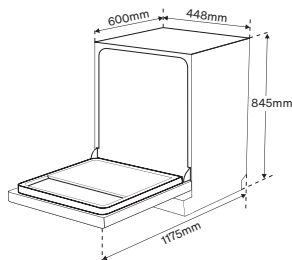

## Additional Functions

$\frac{1}{2}$	<b>Half Load:</b> When the dishwasher is only at half capacity, you can choose this function to save energy and water.
- +	<b>Delay Start:</b> Increase or decrease the Delay Start time up to 24 hours.
	<b>Extra Dry:</b> The rinse cycle will perform at a higher temp. for a better drying result.

## Details

Product Dimensions (W, D, H mm): 448 × 600 × 845  
Warranty Period: 3 Years

## Wash Programs

	<b>Intensive:</b> For heaviest soiled crockery, such as pots, pans, casserole dishes and dishes that have been sitting with dried food on them for some time.
	<b>Heavy:</b> For heavily soiled loads, such as pots, plates, glasses and lightly soiled pans.
ECO	<b>ECO:</b> This program is for normally soiled loads at rated capacity.
	<b>Glass:</b> Suitable for lightly soiled glassware.
	<b>90 min:</b> A fast 90 minute daily program for lightly soiled dishes.
	<b>Rapid:</b> A quick 30 minute wash suitable for lightly soiled dishes with no drying stage.

	<b>Auto Door Opening:</b> Press and hold for 3 secs. to set the door to automatically open at the end of the program wash cycle.
	<b>Extra Clean:</b> This cycle will increase the main wash, rinse and drying times.
	<b>Child Lock:</b> Press and hold for 3 secs. to lock or unlock the buttons on the control panel

## Support

Telephone: 1300 11 HELP (4357)  
Email: support@residentiagroup.com.au

